




Patch Repair:

- Small Patch: Level with **Master Wall Base Coat**
- Large Patch: Clean and remove all loose stucco, apply **Master Wall BA57 Bonding Agent** and level with stucco

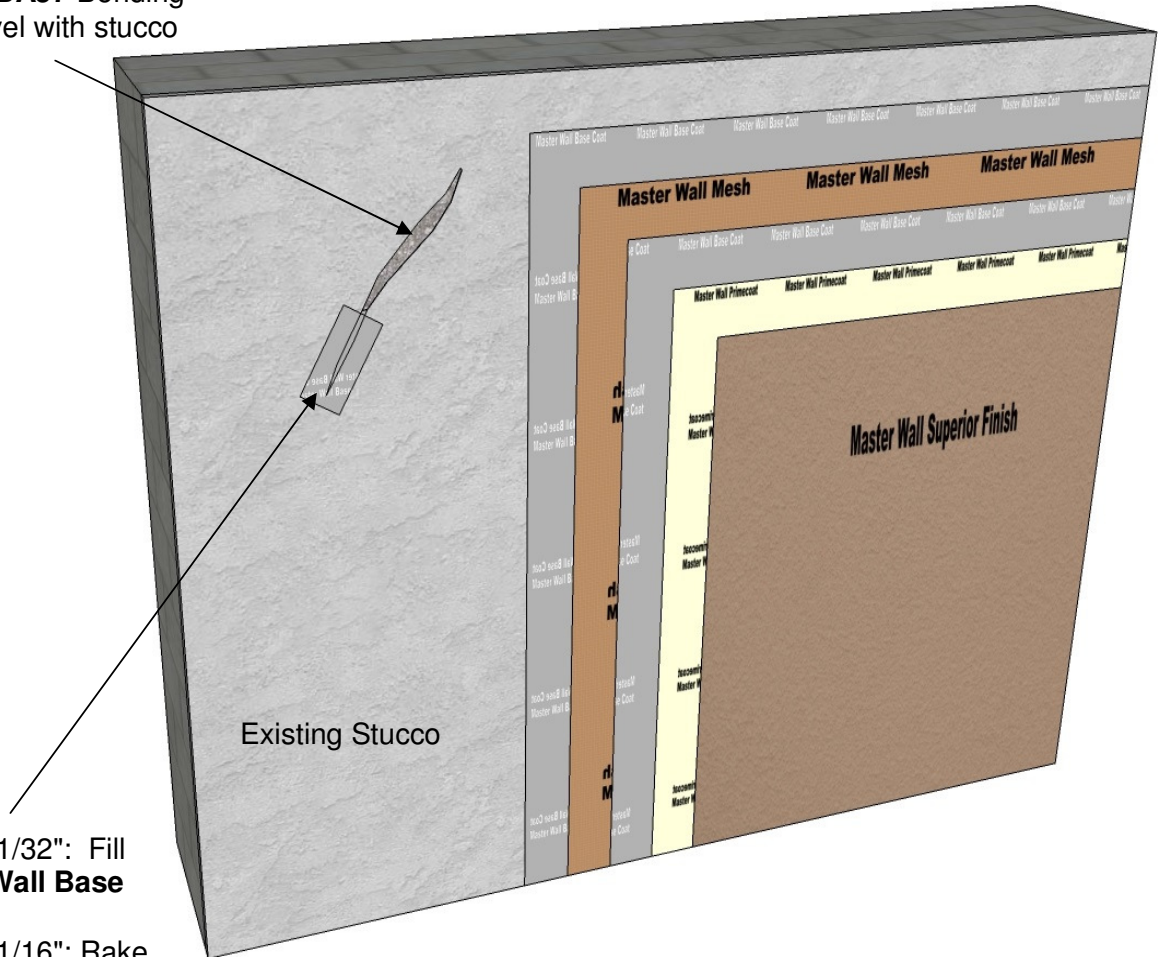

Crack Repair:

- Greater than 1/32": Fill with **Master Wall Base Coat**
- Greater than 1/16": Rake, clean and fill with **Master Wall Base Coat and Standard Mesh**

SR-01 Typical Assembly with notes

These drawings relay the conceptual conditions of Master Wall® Systems and are not the construction drawings. Ultimately the design and detailing of an entire wall system is the responsibility of a professional. These details will guide the design professional in the use of Master Wall® Products. Master Wall disclaims design, warranty or construction intent or responsibility. **Bold = Master Wall® Product.** ©2017 Master Wall Inc.®